



Note: We don't use J2 aviation plug for KBS controller. You may apply 8-30V for PWR vs RTN. You can find the definitions for ports in user manual.

Note:

1. Kelly provides USB-to-RS232 converter for these controller models. It is straightforward cable, others may not work with our controller.
2. Customers may not try to connect the controller to the user program while the motor is running, let alone change the settings. In brief, the motor should be disconnected to the controller before communicating.

						KELLY CONTROLS, LLC		
Mark		Subarea	Signatory		Date	06/2011		
Design			Stand		modification	Number	Proportion	
Assessor								V1.0
Technics			Authorize					
						Sum		